



MUSTEE

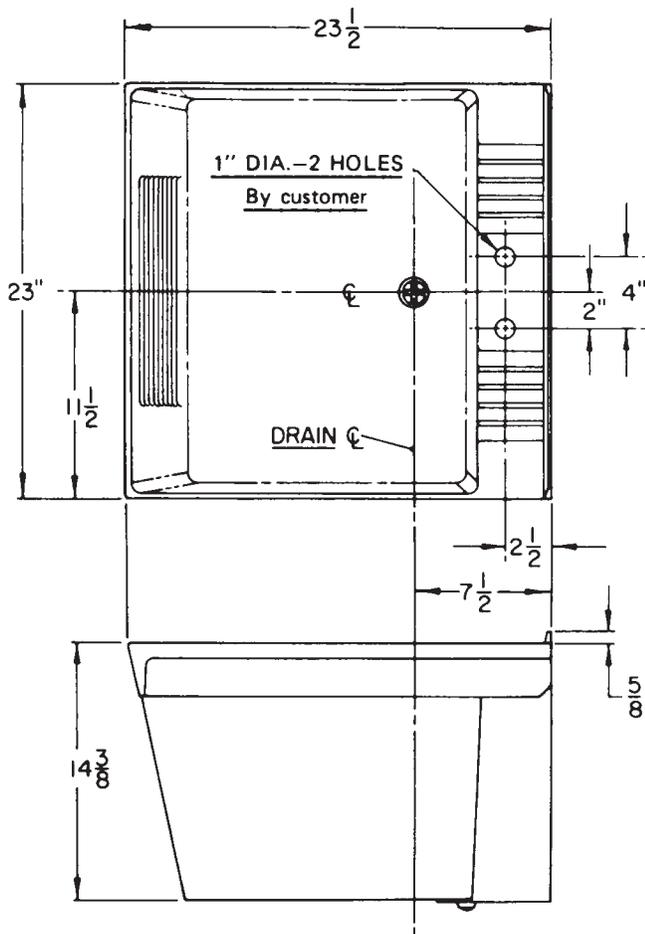

MODEL 15W (15WK) WALL MOUNTED LAUNDRY TRAY

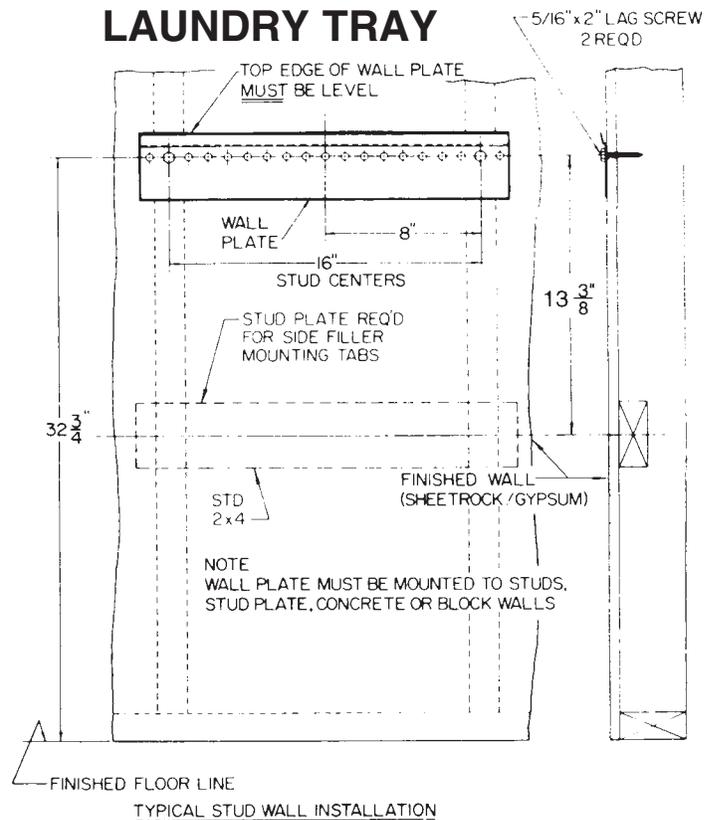

1. Secure **Wall Plate** to wall using both 5/16" x 2" **Lag Screws**. Locate mounting holes 1-1/2" below desired tray height as measured from top edge of rim.

Hole Size:

Wood Walls (open stud) – Drill 3/16" diameter holes into wall studs or plate.

Cement/Masonry Walls – Drill 3/8" diameter holes for 5/16" plastic anchors.

Check level, tighten securely.

2. Turn **Laundry Tray** upside down on a smooth, clean surface to allow for the removal of the 1" (inch) dia. faucet hole plugs which are located on 4" (inch) centers. Be sure to allow for rear ledge overhang – approx. 5/8". This will give more support to the ledge area. The hole plugs may be removed by punching out, using a 3/4" (inch) pipe nipple with one end chamfered to ease cutting or by drilling with a 1" (inch) diameter hole saw.
3. Assemble **Molded Side Fillers** – insert tab between lugs under rear ledge. Position bottom plate over molded lug. Insert 1/4" x 3/4" **Drive Rivet** into lug hole, two rivets per side filler. Hammer to lock in place.
4. Mount faucet (not furnished) on tray. Faucet holes are on 4" (inch) centers. If "clamp-on" style faucet is preferred – optional faucet block Part No. 20.600 is available.
5. Mark location of molded side filler mounting tab holes. Remove **Laundry Tray** and follow anchoring procedures as outlined in Step 1. Reinstall **Laundry Tray**. Be sure to use the 5/16" dia. Flat Washers under the heads of the 5/16" Lag Screws. The washers will keep the Lag Screws from digging into and possibly damaging the side filler tab.
6. Make final plumbing connections in compliance with local code regulations.

E.L. MUSTEE & SONS, INC.


5431 West 164th Street • Brook Park, Ohio 44142

SI-140 (05•14)

MODEL 15W (15WK)



PARTS ILLUSTRATION

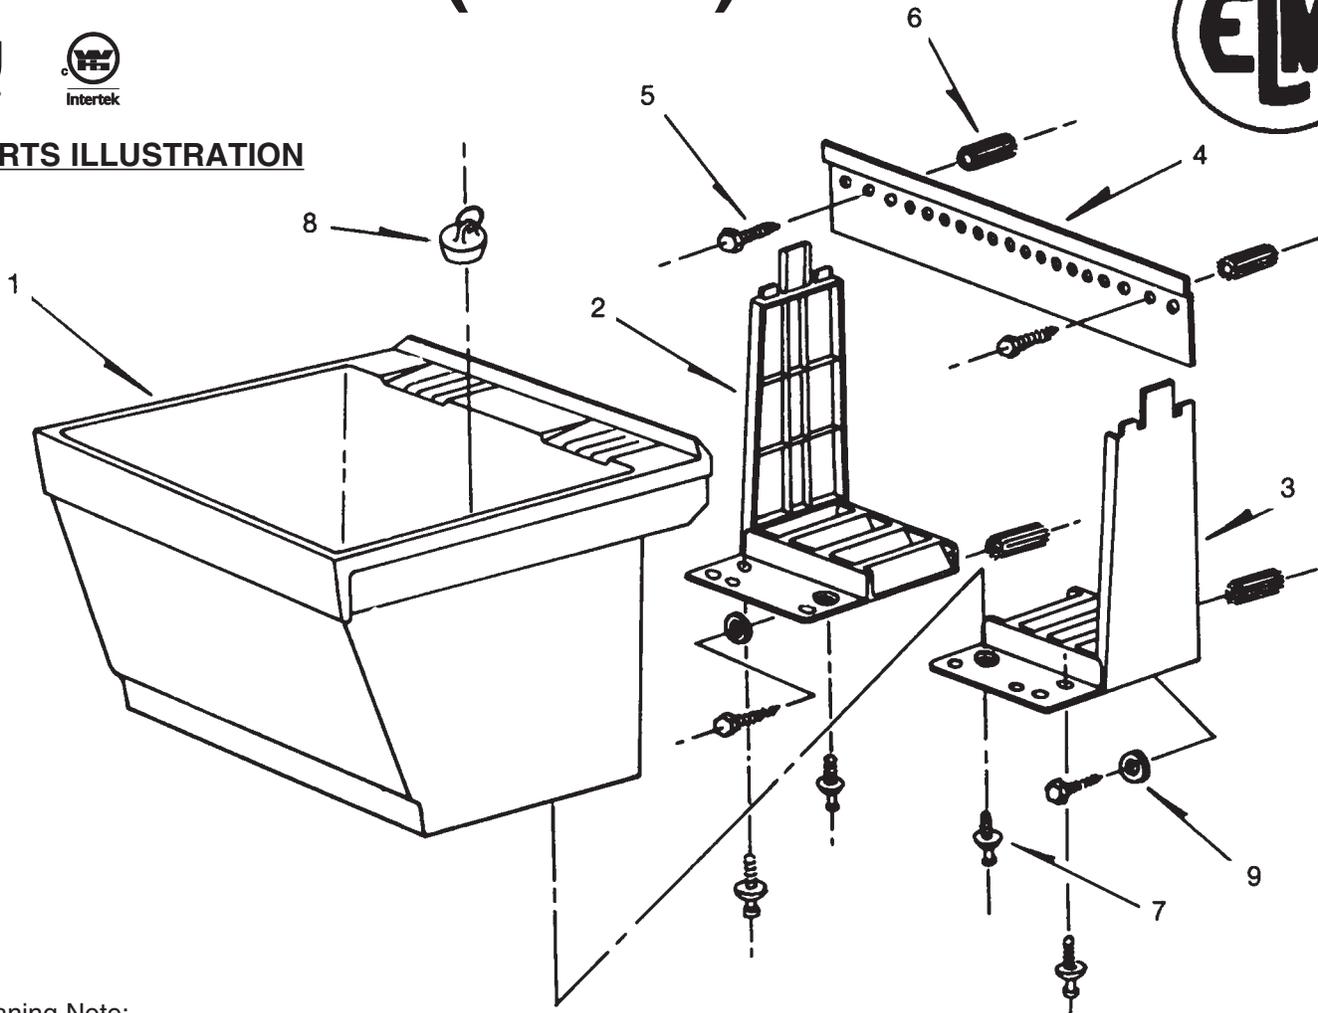

Cleaning Note:

Most stains that you may acquire in your **Model 15W Laundry Tray** may be removed with common household cleanser or liquid cleaner. Stubborn stains may be removed with a bleach solution – follow bleach manufacturer’s recommended procedures pertaining to safety, handling and use of their product.

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION
1	15.101	Single Compartment Laundry Tray
2	19.203	Molded Side Filler – Left Hand
3	19.202	Molded Side Filler – Right Hand
4	18.201	Wall Plate
5	*	Lag Screw, 5/16" x 2" (4 Required)
6	*	Anchor, Plastic, 5/16" (4 Required)
7	*	Drive Rivet – 1/4" Dia. x 3/4" Lg. (4 Required)
8	*	Stopper – 1-1/2" Diameter
9	*	5/16" Flat Washer (2 Required)
10	*	1-1/2" Tailpiece Washer (Not Shown)
11	*	1-1/2" Thrd. Slip Nut (Not Shown)

NOTE:

Any type of transfer or sump pump must be supported by the floor or wall plus appropriate bracing for the waste lines. **DO NOT RELY SOLELY ON THE 1/2" MOLDED DRAIN CONNECTION.**

*NOTE: FOR REPLACEMENT HARDWARE, ORDER COMPLETE PARTS PACKAGE PART NO. 19.601 PACKAGES WILL NOT BE SPLIT FOR INDIVIDUAL PARTS.

E.L. MUSTEE & SONS, INC.

5431 West 164th Street • Brook Park, Ohio 44142

SI-140 (05•14)