

## WYNDHAM COLLECTION

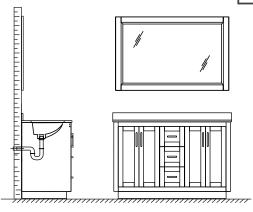


- Prior to installation please check received items against the "Packing List".
  Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door and drawer alignment is required, please follow the easy directions below.
- Backsplash comes in two pieces.




(Not all components may be included, depending upon your purchase)

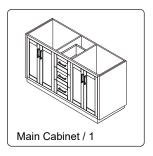




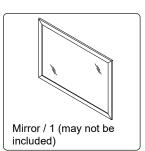


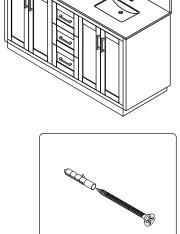



### HOW TO ADJUST HINGES (if required)











Screws for mirror / 2 (may

not be included)

#### REQUIRED TOOLS NOT IN BOX







Spirit Level



Phillips Screwdriver



Tape measure



Pencil




Electric Drill


WC-2929-60-DBL Installation Guide

## WYNDHAM COLLECTION


#### INSTALLATION INSTRUCTIONS

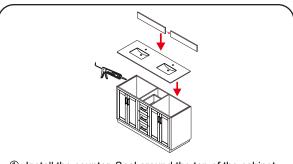


① Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

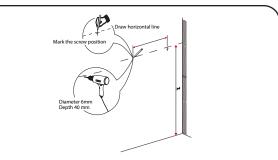

② Install the mirror: use a pencil to mark the placement of the screw holes on the wall, drill the holes and insert the plastic wall anchors.

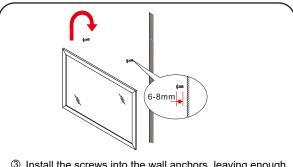


③ Install the screws into the wall anchors, leaving enough of the screw exposed to hang the mirror - approx 1/4" -1/2".

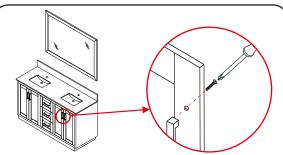

 Remove the handles from inside the cabinet doors and drawers and reinstall on the outside. Do not over tighten when reattaching.


### HOW TO ADJUST DRAWER SLIDES (if required)

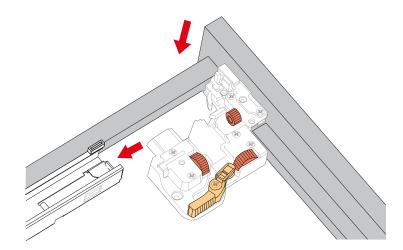


Up and Down Adjustment

WC-2929-60-DBL Installation Guide

# WYNDHAM COLLECTION

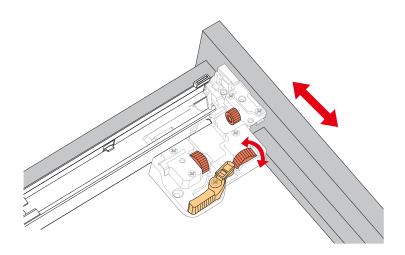

Side Adjustment

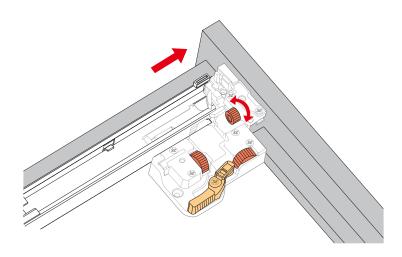

Depth Adjustment



Scan the QR code with your phone to watch detailed video instructions or visit www.wyndhamcollection.com/3dslides

WC-2929-60-DBL Installation Guide